


## How to set Video Loss, Hdd Overwrite



Config in the Local Menu.

Go to Storage – Advanced – Select Overwrite

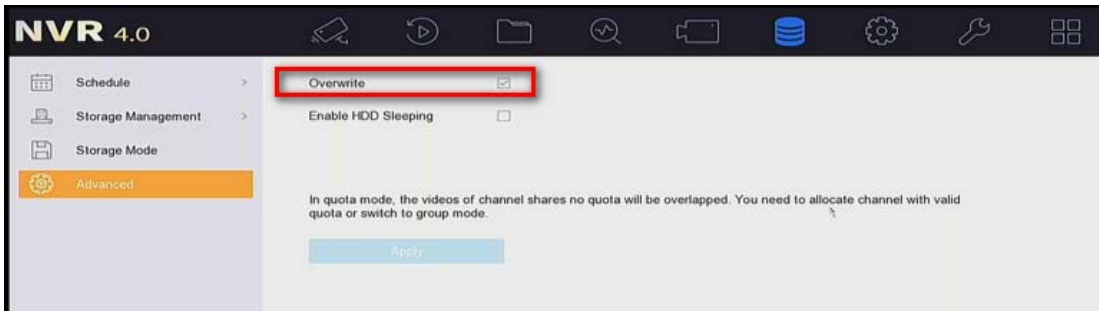


If overwrite not enabled we will receive HDD full alarm.

Go to System – Event – Exception.

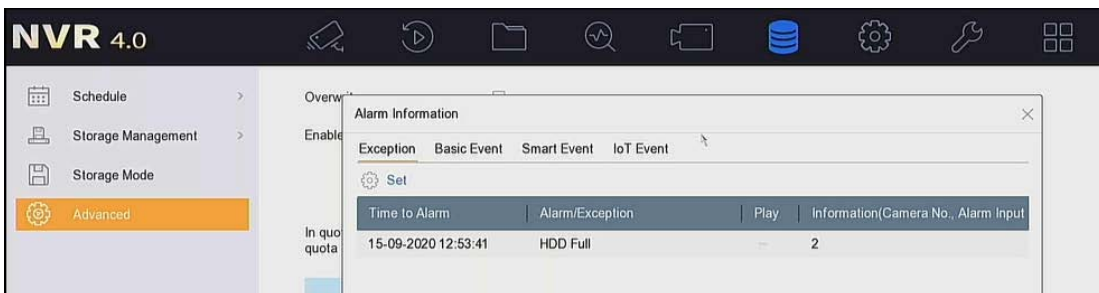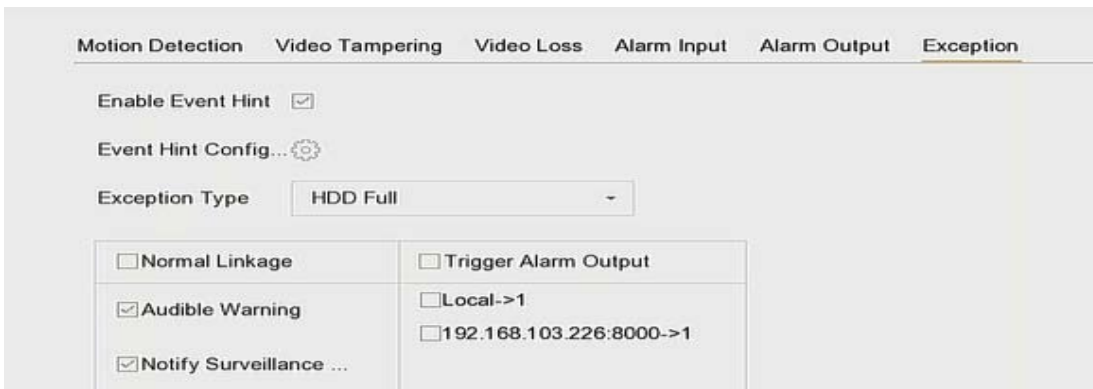


## Video Loss

Enable Video Loss Enable – Select

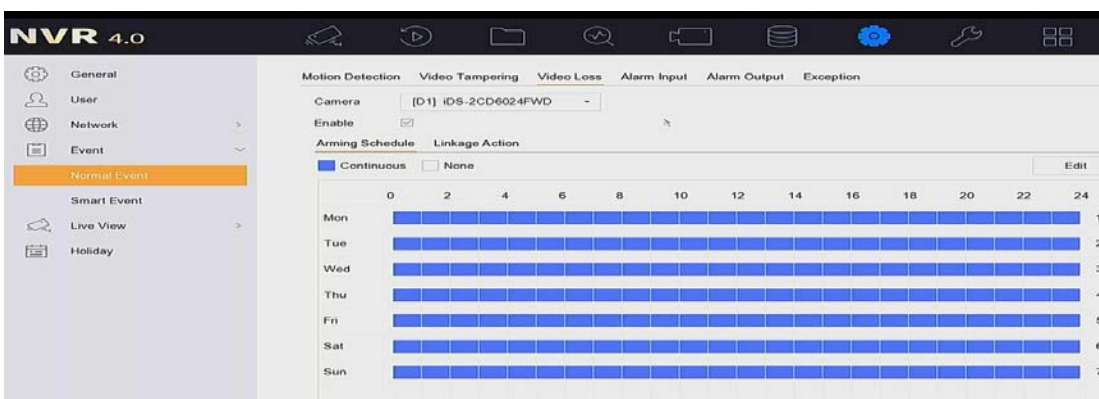

## Enable the Linkage

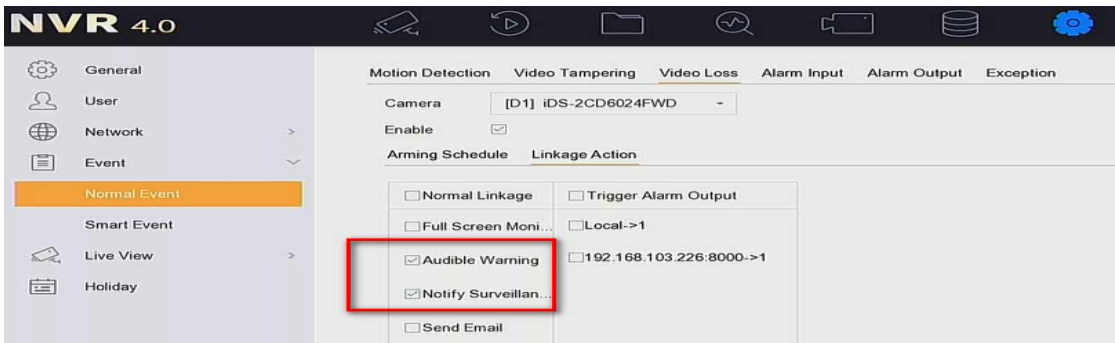

Hdd error – Go to System – Event – Exception.

